



This document is copyrighted by NRMCA. Print copies can be obtained from NRMCA by calling (301) 587-1400 ext. 101.

NRMCA

What, Why & How? Curling of Concrete Slabs

CONCRETE IN PRACTICE

CIP 19

WHAT is Curling?


Curling is the distortion of a slab into a curved shape by upward or downward bending of the edges. This distortion can lift the edges of the slab from the base, leaving an unsupported edge or corner which can crack when heavy loads are applied. Sometimes, curling is evident at an early age. In other cases, slabs may curl over an extended period.

WHY do Concrete Slabs Curl?


Typically, upward curling of the edges of a slab is caused by shrinkage or contraction of the top relative to the bottom. When one surface of the slab changes size more than the other, the slab will warp at its edges in the direction of relative shortening. This curling is most noticeable at the sides and corners.

Changes in slab dimensions which lead to curling are most often related to moisture and temperature gradients in the slab. One primary characteristic of concrete which affects curling is drying shrinkage. The most common occurrence of curling is when the top part of the slab dries and shrinks with respect to the bottom. The slab edges curl upward (Figure 1A). Immediate curling of a slab is most likely related to poor curing and rapid surface drying; and anything that increases drying shrinkage, such as an admixture, will tend to increase curling.

In slabs, bleeding and poor curing both tend to produce surface concrete with higher drying shrinkage potential than the concrete in the bottom of the slab. Bleeding is accentuated in slabs on polyethylene or topping mixtures placed on concrete slabs; and shrinkage differences from top to bottom in these cases are larger than for slabs on an absorptive subgrade.

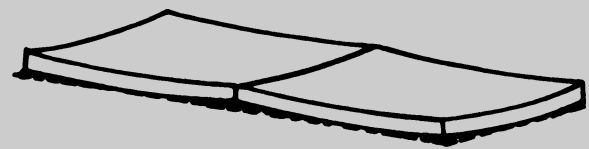

A. Upward Concave Slabs

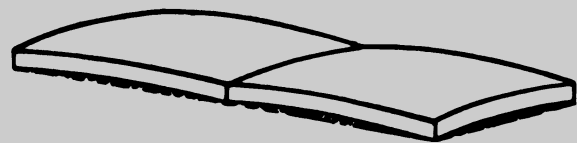

B. Downward Concave Slabs

Figure 1. Curling of Concrete Slabs
(from Transportation Research Record 1207)

Thin slabs and long joint spacing tend to increase curling. For this reason, thin unbonded toppings need to have a fairly close joint spacing.

In industrial floors, close joint spacings may be undesirable because of the increased number of joints and increased joint maintenance problems. However, this must be balanced against the probability of intermediate random cracks and increased curling at the joints.

The other factor that can cause curling is temperature differences between the top and bottom of the slab. The top part of the slab exposed to the sun will expand relative to the cooler bottom causing a downward curling of the edges (Figure 1B). Alternately, during a cold night when the top cools and contracts with respect to a

warmer subgrade, the curling due to this temperature differential will add to the upward curling caused by moisture differentials.

HOW to Minimize Slab Curling

The primary factors controlling dimensional changes of concrete which lead to curling are drying shrinkage, construction practices, moist or wet subgrades, and day-night temperature cycles. The following practices will help to minimize the potential for curling:

1. Use the lowest practical slump and avoid adding retempering water, particularly in hot weather.
2. Use the largest practical maximum size aggregate and/or the highest practical coarse aggregate content to minimize drying shrinkage.
3. Take precautions to avoid excessive bleeding. Use a damp, but absorptive, subgrade so that all the bleed water is not forced to the top of the slab.
4. Avoid using polyethylene vapor barriers unless covered with at least two inches of damp sand.
5. Avoid a higher than necessary cement content if the subgrade is wet in service. Dense, impermeable concrete will produce larger top to bottom moisture differentials and curl more. Use of fly ash is preferable to a very high cement content, and consideration should be given to specifying strength at 56 or 90 days.
6. Cure the concrete thoroughly, including joints and edges. If membrane curing compounds are used, apply at twice the recommended rate in two applications at right angles to each other.

7. For floor areas where curling tends to be a problem, cure the concrete with a heavy wax floor sealing compound of the type used on terrazzo. (Note: Tile adhesives will not stick to these materials.)
8. Use a joint spacing in feet equal to two times the slab thickness in inches (PCA recommendation for maximum size aggregate less than $\frac{3}{4}$ inch).
9. For thin toppings, clean the base slab to ensure bond and consider use of studs and wire around the edges and particularly in the slab corners.
10. Use a thicker slab.
11. The use of properly designed and placed slab reinforcement may help reduce curling.

References

1. Cement and Concrete Terminology, ACI SP-19, American Concrete Institute, Farmington Hills, MI.
2. Guide for Concrete Floor and Slab Construction, ACI 302.1R American Concrete Institute, Farmington Hills, MI.
3. "Shrinkage and Curling of Slabs on Grade, Part II-Warping and Curling," R. F. Ytterberg, ACI Concrete International May 1987, pp. 54-61.
4. "Drying Shrinkage of Concrete," R. C. Meininger, NRMCA Engineering Report No. RD3 (A Summary of Joint Research Laboratory Series), June 1966, 22 pp.
5. NRMCA "Concrete in Practice" (CIP) Series.
6. "Slabs on Grade," ACI Concrete Craftsman Series, American Concrete Institute, Farmington Hills, MI.
7. Transportation Research Record 1207, Pavement Design, National Research Council, Washington, D.C., 1988, p. 44.
8. "Design and Control of Concrete Mixtures," Portland Cement Association, Skokie, IL.



Technical information prepared by
National Ready Mixed Concrete Association
900 Spring Street
Silver Spring, Maryland 20910

© National Ready Mixed Concrete Association.
All rights reserved.

No part of this publication may be reproduced in any form, including photocopying or other electronic means, without permission in writing from the National Ready Mixed Concrete Association.